

## 10.

## PREBACIVANJE NAČINA RADA



Ukoliko na displayu piše

TIPKA	POJAVITI ĆE SE
Pritisnite WHITES & COLORS / VISOKA TEMPERATURA	
Pritisnite PERM.PRESS / SREDNJA TEMPERATURA	
Pritisnite START	
Pritisnite PERM.PRESS / SREDNJA TEMPERATURA	
Pritisnite START	
Pritisnite PERM.PRESS / SREDNJA TEMPERATURA	
Pritisnite START	
Pritisnite WHITES & COLORS / VISOKA TEMPERATURA 2 puta	